


tournez/tournez pour verrouiller. Le support peut être déplacé vers l'avant ou vers l'arrière d'environ ¾" pour affiner la projection du rail.

Étape 4. Fixation du rail de tête

Positionnez le rail de tête de façon à ce que l'arête sur le dessus avant du rail de tête s'insère dans l'avant du support comme illustré, puis poussez vers le haut jusqu'à ce que les languettes métalliques à l'arrière du support s'enclenchent sur l'arrière du rail de tête.

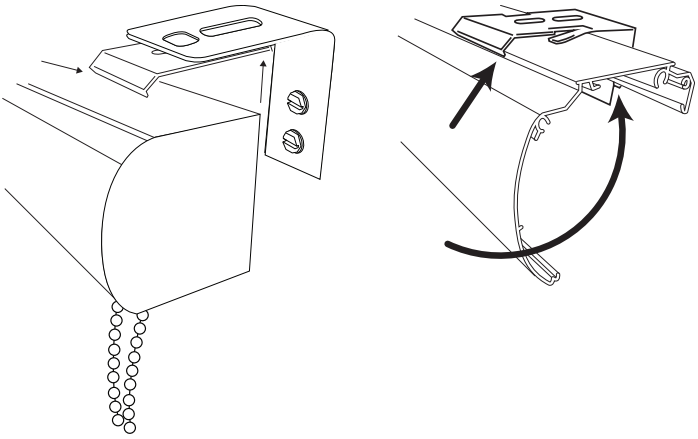

Étape 5. Installez le dispositif de tension de la chaînette

Le tendeur doit être fixé conformément à ces instructions pour fonctionner correctement.


Déballiez soigneusement le tendeur de chaîne. Coupez et retirez le nœud en plastique.

Montage intérieur: en cas de montage dans du bois, pré-percer des trous de vis, puis installez le tendeur de chaîne à l'aide des vis à tête Phillips de 1" à condition de. Si vous ne le fixez pas dans le bois, utilisez des ancrages pour le substrat et suivez l'ancrage instruction du fabricant.

Tout en tenant le dispositif de tension d'une main, tirez le piston loin de la perle chaînette avec l'autre main. Soulevez la perle chaînette hors de la rainure de verrouillage du talon et faites glisser le dispositif de tension vers le bas du boucle de chaînette.

Tirez le dispositif de tension vers le bas jusqu'à ce que le cordon de la chaînette est complètement tendue (le piston sera au haut), puis déplacez le dispositif de tension vers le haut environ 1/8". Marquez les emplacements des vis sur le mur ou le cadre de la fenêtre avec un crayon.

Montage extérieur: Déplacez le tendeur vers le bas de la chaîne comme ci-dessus. Appuyez-le ensuite sur les poteaux du support de montage. Installez soigneusement les vis à tête Phillips 3/8" fournies à travers le dispositif de tension dans le support de montage à l'aide d'un tournevis cruciforme (**NE LES SERREZ PAS TROP**!).

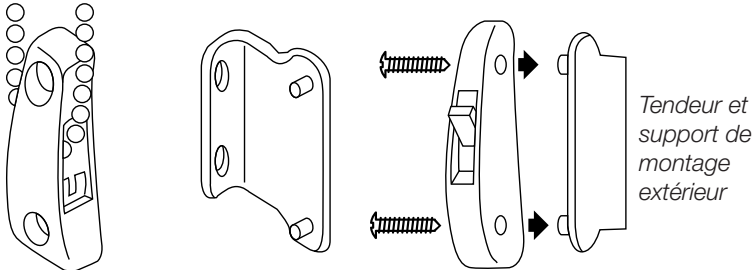

Tirez le tendeur vers le bas comme ci-dessus et marquez la position du support de montage

extérieur avec un crayon. Séparez maintenant le dispositif de tension du support, marquez les emplacements des vis du support avec un crayon et fixez-le avec les vis de 1», puis remplacez le dispositif de tension sur le support.

NE LES SERREZ PAS TROP !

Étape 6. Comment opérer

Tirez doucement et lentement sur le cordon dans une direction soulève le store ; le jeter dans l'autre sens le fait baisser. Ajustez les supports en tissu de la même manière.

NETTOYAGE

Pour nettoyer le tissu de la store, utilisez une plume chiffon ou aspirer légèrement en utilisant le soft accessoire de brosse ou de rembourrage. Pour spot nettoyage, utilisez de l'eau tiède (pas chaude!) avec un savon doux à nettoyer humide.

PIÈCES DE REMPLACEMENT

Si des pièces de rechange sont nécessaires, vous pouvez appeler le service client Veuillez vous assurer de fournir les informations suivantes, si possible:

- Le modèle complet ou le numéro de catalogue de votre produit
- Une description du produit
- Une description de la pièce nécessaire.

GARANTIE À VIE LIMITÉE

Le produit joint est garanti à l'acheteur initial du détaillant résidentiel tant qu'il reste dans la fenêtre d'origine.

Ce qui est couvert

Durée de vie: Produit entier contre les défauts de fabrication (c'est-à-dire un défaut dans la conception du produit, les matériaux ou la fabrication qui empêche le produit de fonctionner.

3 Années: Cordons, y compris les cordons internes tels que ceux trouvés dans les stores ou les stores sans corde.

5 Années: Tout tissu.

Ce qui n'est pas couvert

1. L'usure normale
2. Tout produit qui échoue à cause de: • Abuser de • Altérations
• Exposition à l'air salin • Nettoyage inapproprié
• Mauvaise installation • Mauvaise application • Accident
• Dommages causés par des parasites / insectes / animaux domestiques
• Usage extraordinaire • Mauvaise manipulation • Mauvaise opération • Abus
3. Produits de bois naturels qui ont: • Perte d'intensité de la couleur
• Variations de couleur, de grain ou de texture
• Déformation des lattes de bois dans les zones très humides
4. Coûts associés à: • Retrait du produit
• Transport vers et depuis le détaillant
• Enlèvement de l'étiquette de la marque • Produit re-mesure
• Réinstallation du produit • livraison
• Dommages accidentels ou consécutifs

Dans le cas où il y aurait plusieurs stores / stores dans la même pièce, seul le store / store défectueux sera remplacé

Signaler les dommages d'expédition:

Si des dommages se sont produits lors de l'expédition, appelez le lieu d'achat et signalez-le dans un délai de 7 jours calendaires. Dans le cas contraire, le crédit de votre produit

endommagé pourrait vous être refusé..

Pour obtenir du service:

Si vous soupçonnez que ce produit présente un défaut de fabrication ou de fabrication:

1. Localiser le ticket de caisse
2. Appeler le lieu d'achat

Aucun retour non autorisé ne sera accepté.

Remède à la garantie:

CE SERA VOTRE SEUL RECOURS EN VERTU DE CETTE GARANTIE LIMITÉE.

S'il s'avère que ce produit présente un vice de fabrication, qu'il s'agisse d'un vice de matériau ou de fabrication, nous procéderons de l'une des manières suivantes:

- Réparer le produit
- Remplacer le produit
- Rembourser le coût du produit

Les couleurs peuvent varier d'un lot à l'autre et peuvent ne pas correspondre exactement aux échantillons ou aux achats précédents.

Les articles abandonnés ou les sélections de couleurs seront remplacés par le produit actuel équivalent le plus proche.

VOS DROITS EN VERTU DE LA LOI DE L'ÉTAT:

Cette garantie limitée à vie vous confère des droits légaux spécifiques. Vous pouvez également disposer d'autres droits qui varient d'un État à l'autre. Certains états n'autorisant pas de limitation de la durée d'une garantie, les limitations ci-dessus peuvent donc ne pas s'appliquer à vous. Aucun agent, représentant, revendeur ou employé non autorisé n'a le pouvoir d'augmenter ou de modifier l'obligation de cette garantie. Cette garantie limitée à vie remplace toutes les versions précédentes.

Sheer Shadings with Continuous Chain Operation

Part No. MEIN0279 Rev. 2

ENG


INSTALLATION INSTRUCTIONS

Step 1. Check Package Contents. Missing part? Call Customer Service.

Mounting hardware kit includes the following:

Part	Quantity
Mounting Brackets	3 (for shades 24" to 60" wide) 4 (for shades 60" to 90" wide) 5 (for shades over 90" wide)
1½" Screws	2 per bracket
Screws for Tension Device	2 (1") Phillips head 2 (¾") for outside mount

Step 2. Tools required

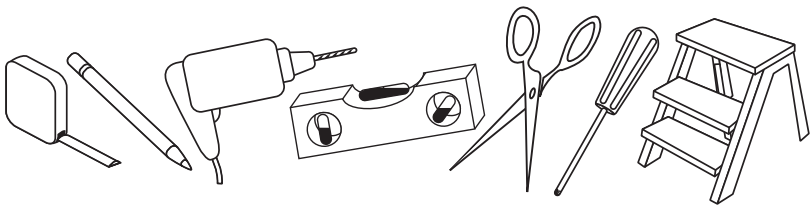

Pencil, tape measure, level, screw driver, Scissors, pliers, step stool, drill.

Step 3. Installation


Your blind may be installed either inside the window frame or outside the window frame.

Wallboard or Plaster: use wall anchors (not included).

Concrete, Stone, Brick: use a masonry drill bit and anchors or screws specifically designed for masonry (not included).

Inside Mounting:

One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets.

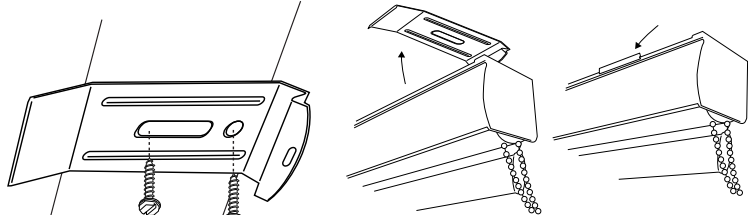


Attach each bracket to the inner top of the window opening using the screws provided. Pre-drill the screw holes using a 5/64" drill bit.

For flush inside mounts, attach the brackets to the head rail first (see drawings and attachment instructions below), and then position the shade in the window opening as desired. Then make pencil marks at the back of the head rail where each bracket is to be positioned. Align the brackets with the pencil marks, and then screw them in place as described above.


Outside Mounting:

Attach the 'L' shaped brackets to the wall or window framing as illustrated. One bracket should be positioned about 2" to 6" from each end of the head rail. The other bracket(s) should be spaced evenly between the two outermost brackets. Pre-drill the screw holes using a 5/64" drill bit.


The brackets must be level – use a Spirit Level if necessary to assure proper alignment.

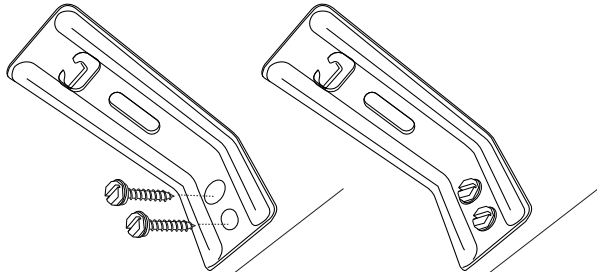

Now attach the brackets used for Inside Mount to each 'L' shaped bracket by placing the elongated slot of each bracket over the tab on the 'L' bracket and twist/turn it so that it becomes attached. The bracket can move forward or backward about ¾" for fine tuning the projection of the head rail.

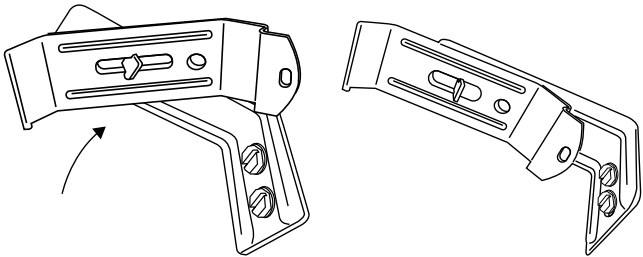

Step 4. Securing the Head Rail

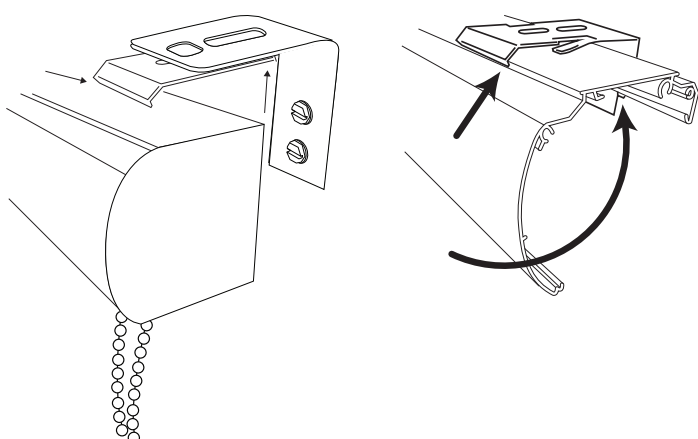

Position the head rail so that the ridge on the top-front of the head rail fits into the front of the bracket as illustrated, and then push upward until the metal tabs on the back of the bracket snap onto the back of the head rail.

Step 5. Install the Chain Tension Device

The Tension Device must be attached per these instructions in order for your shade to function properly.

Carefully unwrap the control cord/chain and tension device. Cut and remove the zip-tie.

Inside Mount: If mounting into wood, predrill screw holes and then install the tension device using the 1" Phillips head screws provided.

If not securing into wood, use appropriate anchors for the substrate and follow the anchor manufacturer's instructions.


While holding the tension device in one hand, pull the plunger away from the bead chain with the other hand. Lift the bead chain out of the bead locking groove and slide the tension device to the bottom of the chain loop.

Pull the tension device down until the bead chain is fully tensioned (plunger will be at the top) and then move the tension device up approximately 1/8".

Mark the screw locations on the wall or window frame with a pencil.

Outside Mount: Move the tension Device to the bottom of the chain as noted above. Then press the tension device onto the mounting bracket posts. Carefully install the 3/8" Phillips head screws provided through the tension device into the mounting bracket using a Phillips head screwdriver (**DO NOT OVER-TIGHTEN!**). Pull the tension device down as noted above and pencil mark the position of the outside mount bracket. Now detach the tension device from the bracket, pencil mark the screw locations for the bracket and attach it using the 1" screws, and then reattach the tension device to the bracket.

DO NOT OVER-TIGHTEN!

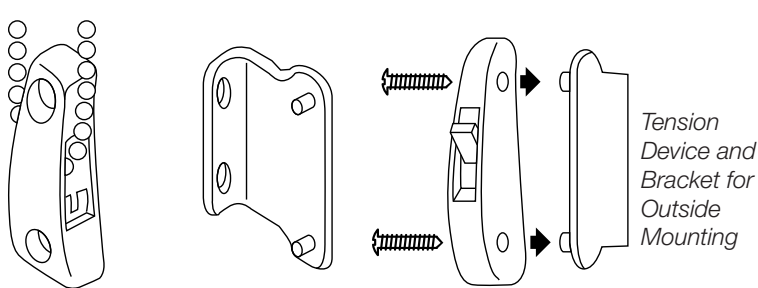

Step 6. How to Operate

Pulling the cord smoothly and slowly in one direction raises the shade; pulling it in the other direction lowers it. Adjust the fabric louvers in the same manner.

Cleaning

To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush or upholstery attachment. For spot cleaning, use warm (not hot!) water with a mild soap to damp clean.

REPLACEMENT PARTS

In the event that replacement parts are ever needed, you may call Customer Service.

Please be sure to provide the following information, if possible:

- The complete model or catalog number of your product
- A description of the product
- A description of the part needed

LIMITED LIFETIME WARRANTY

The enclosed product is warranted to the original residential retail purchaser as long as the product remains in the original window.

Covered:

Lifetime: Entire product against manufacturing defects (i.e. a flaw in the product design, materials, or workmanship that causes the product to no longer function)

3 years: Cords including internal cords such as those found in cordless blinds.

5 years: All fabric

Not Covered:

Normal Wear and Tear

Any product that fails due to: abuse • exposure to salt air

- improper installation • accident • extraordinary use
- improper operation • alterations • improper cleaning
- misapplication • damage from pests/insects/pets
- improper handling • misuse.

Natural wood products that have: loss of color intensity

- yellowing or cracking of plastic parts or foam wood product
- variations in color, grain, or texture
- warping of wood slats in high humidity areas.

Costs associated with: product removal
• transportation to and from the retailer • brand label removal
• product remeasure • incidental or consequential damages
• product reinstallation • shipping.

In the event there are multiple blinds/shades in the same room, only the defective blind/shade will be replaced.

To Report Shipping Damage:

If damage occurred during shipping, call place of purchase and report within 7 calendar days or else you may be denied credit for your damaged product.

To Obtain Service:

If you suspect this product has a manufacturing defect in materials or workmanship:

1. Locate the sales receipt
2. Call place of purchase

Any unauthorized returns will not be accepted.

Warranty Remedy:

THIS SHALL BE YOUR SOLE REMEDY UNDER THIS LIMITED WARRANTY.

If this product is found to have a manufacturing defect in materials or workmanship, we will (at our discretion) do one of the following

- Repair the product
- Replace the product
- Refund the cost of the product

